

## APPENDIX B

# ADJUSTING THE OPEN AND CLOSE STOP LIMITS FOR THE SUNSETTER MOTORIZED AWNING

If a preset Open or Close stop position needs to be changed, but the Awning cannot stop automatically at that position, possibly due to an obstruction such as a tree or shed being in the way, then see Appendix D to clear the motor of preset stop positions and set new Open and Close stop positions.



### TO CHANGE THE OPEN LIMIT:

1. Select the correct Channel. The Remote was preset to operate on Channel 1.
2. Open the Awning to its current Open position and **let it stop on its own.**
3. Press and Hold the OPEN (▼) and CLOSE (▲) buttons simultaneously until the Awning moves a little bit, or jogs back and forth, then release the buttons.
4. Adjust the Awning to the new Open limit position. The awning moves only while pressing the OPEN (▼) or CLOSE (▲) button.
5. Press and Hold the “my” (my) button until the Awning moves a little bit, or jogs back and forth, then release the “my” (my) button.
6. Check the new Open limit.


### TO CHANGE THE CLOSED LIMIT:

1. Close the awning to its current Closed position and **let it stop on its own.**
2. Press and Hold the OPEN (▼) and CLOSE (▲) buttons simultaneously until the Awning moves a little bit, or jogs back and forth, then release the buttons.
3. Adjust the Awning to the new Closed position. The awning moves only while pressing the OPEN (▼) or CLOSE (▲) button.
4. Press and Hold the “my” (my) button until the Awning moves a little bit, or jogs back and forth, then release the “my” (my) button.
5. Check the new Closed limit.

### OPEN POSITION

When Open, the Lateral Arms are slightly bent and the Fabric is snug.

The Fabric should be rolling over the top of the Roller Bar (see Figure 13), not underneath (See Figure 13a). If the Fabric is rolling from the bottom of the Roller Bar, continue unrolling the Fabric until it rolls over the top of the Roller Bar. Then roll up the Fabric until both the Lateral Arms bend slightly and Fabric becomes tight.

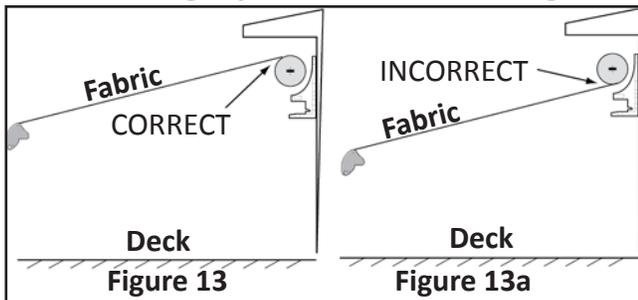

### CLOSE POSITION

The Awning should close to about ½” between the Front Bar and the Arm Clamps. See Figure 14.

